



FOOTPATH THICKENING AROUND PITS
NOT TO SCALE

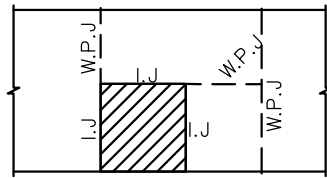

PIT/ACCESS HOLE AT EDGE (PLAN)
NOT TO SCALE

REFER EDCM 401 FOR JOINT DETAILS
W.P.J=WEAKENED PLANE JOINT
I.J = ISOLATION JOINT

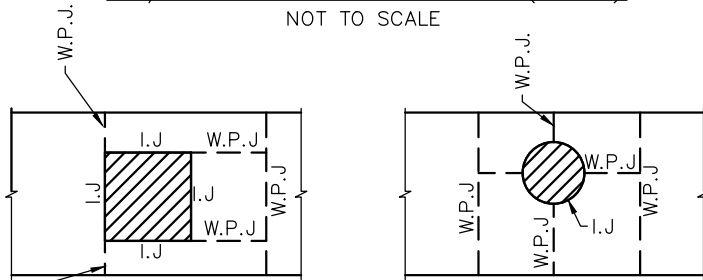

PIT/ACCESS HOLE NOT AT EDGE (PLAN)
NOT TO SCALE

NOTES:

1. FOR JOINT & CONCRETE DETAILS REFER EDCM401.
2. FOOTPATH THICKENING AT PIT TO EXTEND FROM PIT TO NEXT W.P.J OR 500 WHICH EVER IS THE GREATER
3. ISOLATION JOINTS (I.J) ARE NOT REQUIRED AROUND TELECOM AND ELECTRICITY PITS

17/1/2017 2:10:19 PM

E				
D				
C				
B				
A	M.H.	05/2016	ADOPTED FROM EDCM DRAWING. ADDED NOTE 3. FONTS.	
ISSUE	APPD	DATE	AMENDMENT	

GENERAL NOTES



DESIGN	L.SHE
DRAWN	L.SHE
CHECKED	M.HUTCHINSON
DATE	JUNE 2016

PROJECT	STANDARD DRAWING - MCC 402
DETAILS	JOINT DETAIL FOR PITS WITHIN PATHS

N.T.S.	
SHEET 1 OF 1	PAPER A4
DRAWING No.	REV A
FILE NAME	MCC 402 - JOINT DETAIL FOR PITS WITHIN PATHS.DWG